

SPECIFICATIONS

Specifications are subject to change without notice

MODEL	CAPACITY (TON)	MIN.HEIGHT ↗	MAX.HEIGHT ↘	BASE DIMENSION
T42002	2	11-3/16"	16-3/4"	7-1/16x6-1/2"
T43002	3	12-3/16"	16-3/4"	7-11/16x6-7/8"
T43006	3	14"	21"	7-1/8x8-1/2"
T44002	4	12-12/16"	18-3/8"	8-7/16x7-1/2"
T45002	5	13-13/16"	20-1/4"	9-11/16x8-1/4"
T46002	6	16-1/8"	23-5/8"	10-13/16x9-7/16"
T412002	12	19-1/2"	30-3/4"	12-5/8" x 11-3/8"

IMPORTANT SAFETY INFORMATION

Read these safety warnings before operation.

WARNING!

Failure to read these warnings may result in loss of jack stands, personal injury damage.

WARNING!

Do not overload jack stands beyond rated capacity. Overloading can cause damage to or failure of the jack stands.

POSITION LOAD ON CENTER OF SADDLE ONLY. ALWAYS USING STANDS IN PAIRS ON HARD, LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USING OF STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN STANDS' INSTABILITY AND POSSIBLE LOSS OF LOAD.


OPERATION

1. Refer to your vehicle owner's manual for proper jacking procedural lift only on areas of the vehicle as specified by vehicle manufacturer.

2. Position stands under vehicle at points specified by vehicle manufacture as proper load support points.

3. To adjust stands: hold control lever up while lifting saddle shaft to desired height. Push control lever down to lock pawl into teeth located in center column. MAKE SURE PAWL IS FULLY ENGAGED INTO TEETH.

4. Carefully lower load onto stands.

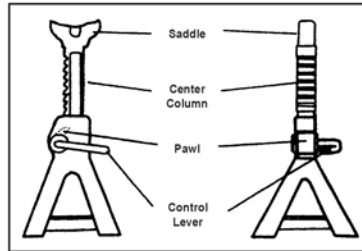


MAINTENANCE & INSPECTION

1. Visual inspection shall be made before use of the stands, checking cracks, cracked welds and missing and/or damage parts. And stand that appears to be damaged in any way shall be removed from service immediately.

2. BECAUSE OF THE POTENTIAL HAZARDS ASSOCIATE THE MISUSE OF EQUIPMENT OF THIS TYPE, NO REPLACEMENT SHALL BE MADE TO THE PRODUCT

JACK STANDS

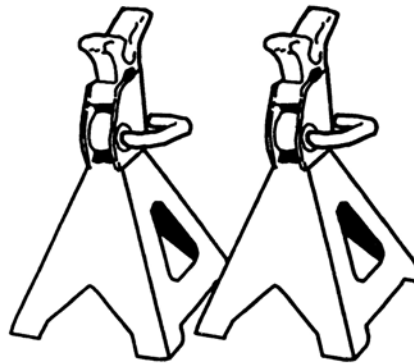

FOR YOUR SAFETY,
please read these instructions carefully and retain them for future use.